# INSTRUCTIONS

for

CATHODE RAY OSCILLOSCOPE

Cat. No. 90903 - Serial No.

JAMES MILLEN MFG. CO., INC. MALDEN, MASS., U. S. A.

# Instructions for 90903 Cathode Ray Oscilloscope

# 1. DESCRIPTION

The 90903 is a general purpose basic Cathode Ray Oscilloscope comprised of a 3KP1 three-inch cathode ray tube, its associated circuit and power supply. All controls are on the front panel. These are: Intensity Control, Focus Control, Horizontal Centering, Vertical Centering, Power Switch and a switch for selecting the Horizontal Input.

The Horizontal Input Switch has three positions which connect the Horizontal Deflection plates to the External Horizontal Input jacks, an internal 60 cycle sweep voltage, or to ground to eliminate pickup.

The 90903, in contrast to other inexpensive oscilloscopes, has a high voltage power supply, which allows much improved definition and intensity of trace.

The green light filter supplied with the oscilloscope passes the color of the trace and rejects other colors thus affording greater contrast. This allows the oscilloscope to be used in fairly bright light without excessive intensity.

The design of the voltage divider eliminates interaction between centering controls and intensity control.

## 2. APPLICATION

The 90903 is entirely adequate for many laboratory, as well as industrial and communication uses. As a transmitter modulation monitor, no additional equipment or accessories are required. The well known trapezoidal monitoring patterns are secured by feeding some modulated carrier voltage from a pickup loop directly to the vertical plates of the cathode ray tube and some audio

modulating voltage to the horizontal plates.

By the addition of such units as a sawtooth sweep generator, amplifiers, a servo-sweep, etc., all of which can be conveniently and neatly constructed on companion rack panels, the original basic oscilloscope unit can be expanded to serve any conceivable oscilloscope application.

# 3. MEASUREMENT OF PERCENTAGE OF MODULATION OF RECEIVED SIGNALS

Couple the plate of the last I. F. amplifier in the receiver to the vertical input on the oscilloscope through a 0.5 mfd. condenser and connect the horizontal input terminal to the vertical input terminal through approximately 50,000 ohms. Ground the oscilloscope chassis to the receiver chassis. Retune the last I. F. transformer.

An unmodulated carrier will appear as an ellipse. Modulation will cause the line to widen to a ribbon leaving a dark oval in the center. At exactly 100% modulation the dark oval in the center decreases to zero. With overmodulation a bright spot appears at the center.

Let A equal the overall outside length of the ellipse.

Let B equal the length of the dark oval.

Then percentage of modulation equals  $[(A-B)/(A+B)] \times 100$ .

The signal must be in the clear for this measurement to be accurate.

### 4. INSTALLATION

Caution: Be certain that the power cord is removed from the wall socket before inserting tubes.

The type 3KP1 three-inch cathode ray tube is inserted from the front of the panel. In order to insert the cathode ray tube, it is necessary to remove the panel bezel, which can be done by the removal of the two screws on the corners of this bezel. Loosen the tube clamp and insert the 3KP1. Rotate the tube so that the key way is up. Plug the tube socket into the tube base and tighten clamp. It might be desirable, after check, to loosen the clamp in order to orient slightly the figure on the screen.

Insert a Type 2X2-A rectifier tube into the rectifier socket and attach plate cap.

Plug the power cord into a source of 115 volt 60 cycle power and turn the oscilloscope on. Set the Horizontal Input Switch to 60 C.P.S., adjust Centering, Intensity and Focus for a sharp line. It may be necessary to short the vertical input jacks to eliminate pickup on the vertical plates. BEING VERY CAREFUL NOT TO TOUCH THE TUBE SOCKET WHICH CARRIES VOLTAGE AS HIGH AS 1000 VOLTS, rotate the tube so that the trace is horizontal. Remove voltage, tighten tube clamp, install socket shield and bezel. The oscilloscope is now ready for operation.

www.everything4lessstore.com

# 5. OPERATING PRECAUTIONS

- 1. Never operate the oscilloscope with the socket shield or the top plate removed.
- 2. Never leave a small stationary bright spot on the face of the tube. This will burn the fluorescent material on the inside of the tube

face.

3. Reduce the intensity by turning the Intensity Control counter-clockwise before removing power from the oscilloscope. This will prolong the life of the cathode ray tube.

### 6. TECHNICAL SUMMARY

**Power Supply** 

105-125 volts—60 cycles Power consumption—19 watts Fuse size—1 ampere DC supply voltage—800 volts Plate voltage—705 volts

Physical Dimensions

Height—51/4 inches Width—19 inches Depth—131/2 inches Weight—14 pounds

The oscilloscope is designed to mount in a standard rack.

**Tube Complement** 

Cathode Ray Tube—3KP1 Rectifier Tube—2X2-A

**Deflection Sensitivity** 

Vertical

12.2 to 14 volts r.m.s. per inch deflection.

35 to 40 volts peak to peak per inch deflection.

Horizontal


16 volts r.m.s. per inch deflection.

46 volts peak to peak per inch deflection.


Horizontal and vertical deflection sensitivity vary somewhat with line voltage changes, intensity control setting, and position of the trace, as well as with different 3KP1 cathode ray tubes. The above values are representative.

90903

1M-4-2-56-R.W.C.

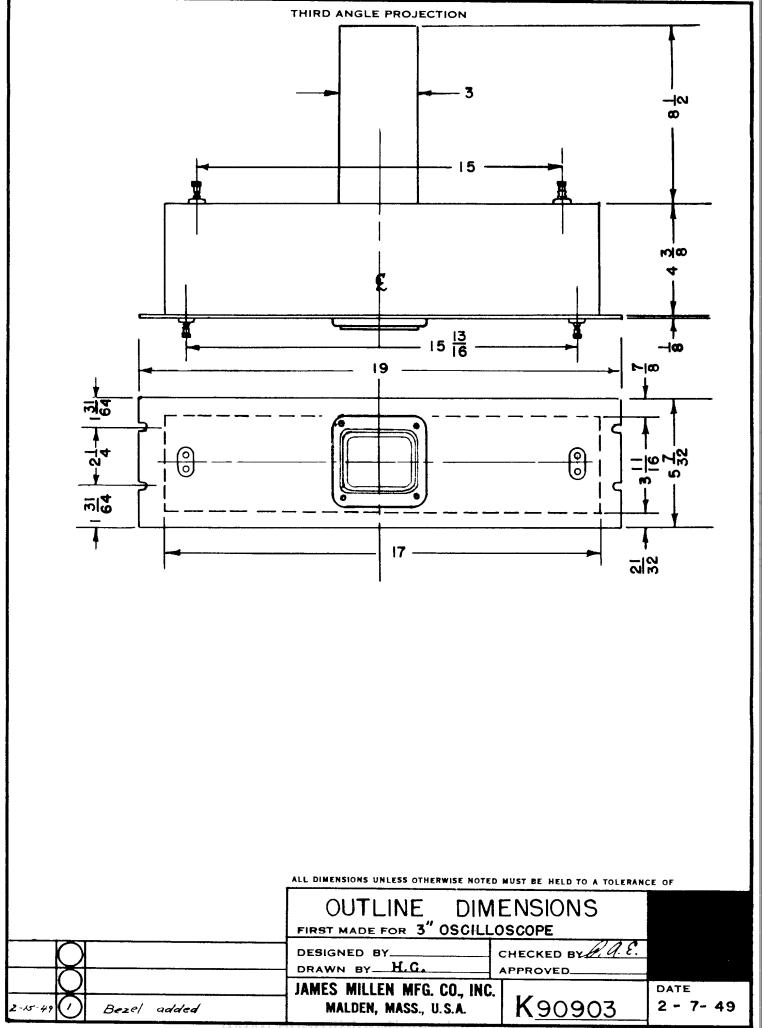

TINTED BY SPAULDING MOSS CO. BOSTON MASS. BE OBDED NO MIDAL

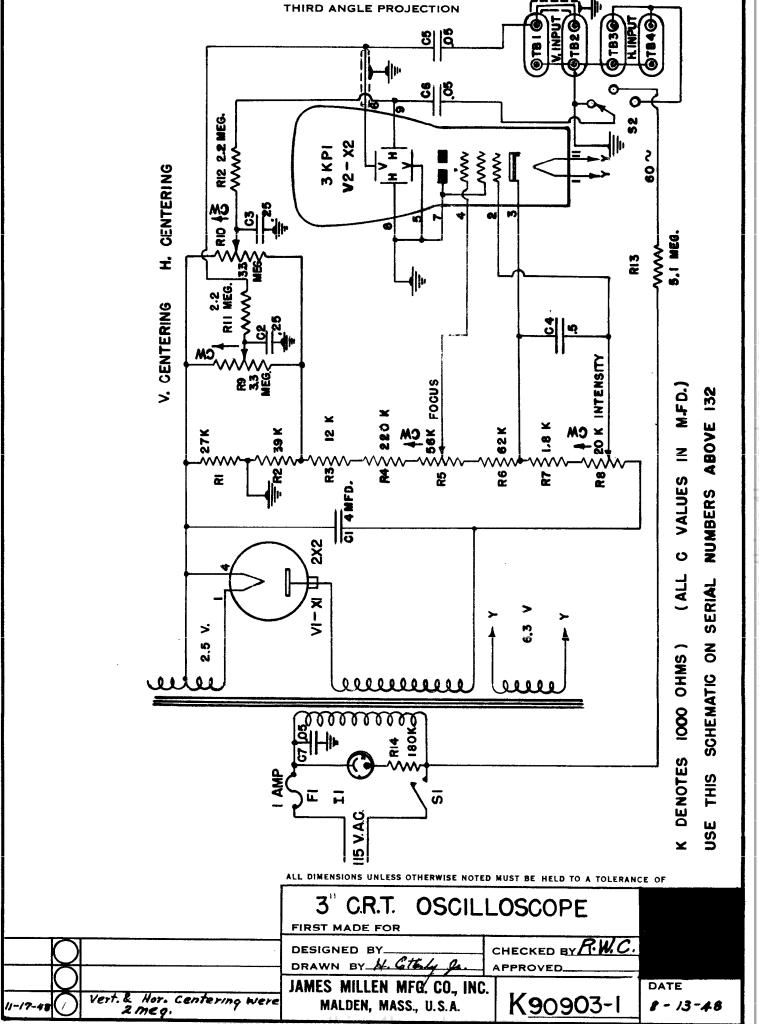

www.everything4lessstore.com